


DualID II User Guide


Using key pad




1. Type pin code
2. Confirm with 
3. Green light in LED3 indicates authorized ID
4. Begin operation.


Using RFID card

1. Present card in front of reader
2. A beep signal indicates correct reading of the card
3. Green light in LED3 indicates authorized ID
4. Begin operation.

Info

- LED1 indicates that the unit is powered
- Cancel key input with  and start again
- Red LED3 indicates that the input is canceled
- Wait 10 seconds before commencing new pin input
- Don't use RFID card and pin code simultaneously
- LED2 is not in use


LED	Color	Meaning
1	Yellow 	Power on
3	Green 	Approved ID
3	Red 	Canceled ID

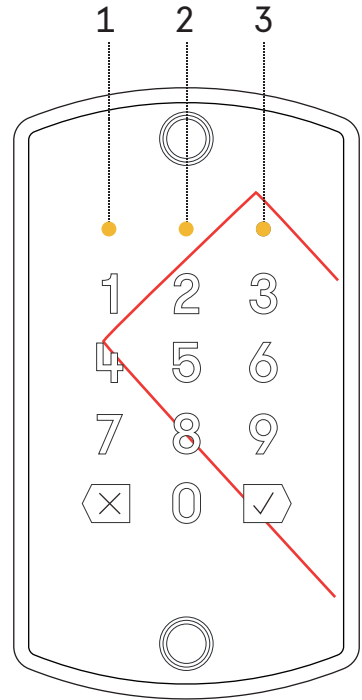


- LED
- Keypad and RFID card reader

7006.1101 V3


DualID II Installation Guide

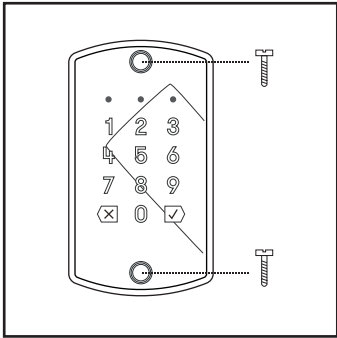

When mounting DualID II, use screws compatible with the surface on which it will be attached.

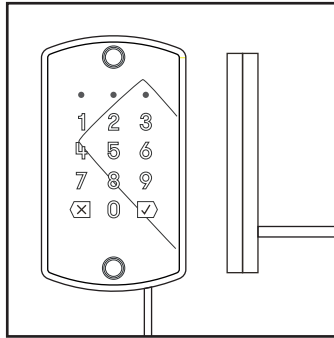

The cable can be installed in two different ways. It can either go downwards or out the back.

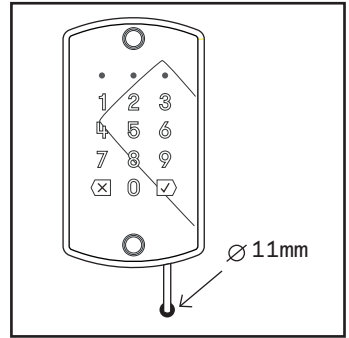

Drill a hole in the back panel and pull the cable through it. The minimum diameter of the hole is 11 mm.